

	Temperature probe or circuit board failure	Send to service center
E2	Temperature probe or circuit board failure	Send to authorized service center

Solution for mal-operation

If you choose other functions or mal-operation while the cooker is in operation, please restart the cooker by pressing "KEEP WARM/OFF" button. Press the button again will start the second cycle.

Operation Chart

Function	Keystrokes	Display	Remark
ON	Press "KEEP WARM/OFF" button	-OFF	Enter to standby mode
OFF	Press "KEEP WARM/OFF" button	----	Enter to standby mode
SOUP	Press "SOUP" button in standby mode	Working time 2.5 hours and count down	Set timer, PRE-SET
STEW	Press "STEW" button in standby mode	Working time 4 hours and count down	Set timer, PRE-SET
SLOW STEW	Press "SLOW STEW" button in standby mode	Working time 6 hours and count down	Set timer, PRE-SET
PORRIDGE	Press "PORRIDGE" button in standby mode	Working time 2 hours and count down	Set timer, PRE-SET
STEAM	Press "STEAM" button in standby mode	Working time 20 minutes and count down	Set timer, PRE-SET
BRAISE	Press "BRAISE" button in standby mode	Working time 2 hours and count down	Set timer, PRE-SET
KEEP WARM	Press "KEEP WARM/OFF" button	b000	

Tips

After the porridge has been finished, if you wish to add raw meat and/or raw fish, press "STEAM" button to cook, be careful the content will spill out, please blend it during cooking to avoid scorching.

NAKADA GROUP (M) SDN BHD

ADD: LOT 3466 JALAN JINJANG AMAN 2
JINJANG UTARA 52000 KUALA LUMPUR
MALAYSIA

TEL: 603 62 503 503 FAX: 603 62 504 504

EMAIL: INFO@NAKADA.COM.MY

FACEBOOK: WWW.FACEBOOK.COM/PRIMADANAKADAGROUP

www.primada.com.my

Primada®



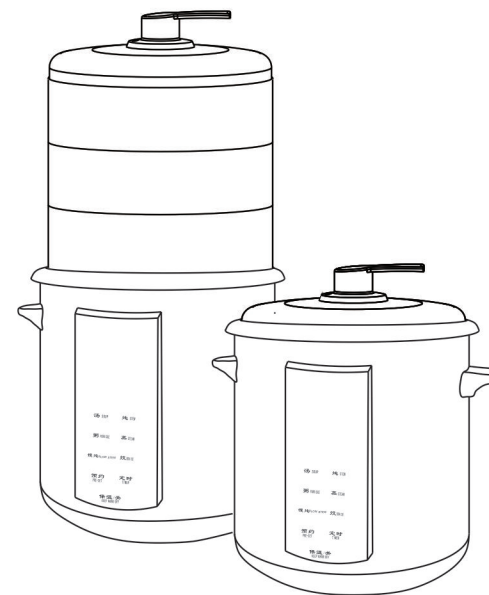
智能蒸炖煲

INTELLIGENT STEAM & STEW COOKER

使用说明书

OPERATION INSTRUCTIONS

型号: MPS-13



使用产品前请仔细阅读本使用说明书，并妥善保存。

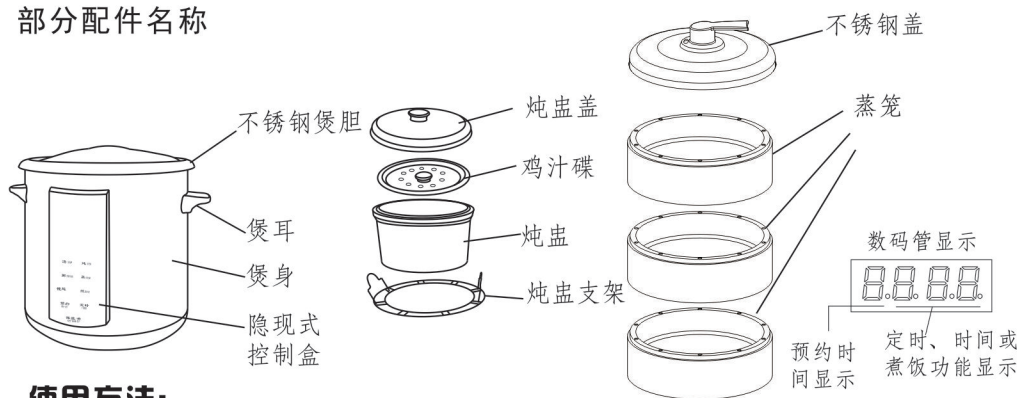
Please read these instructions carefully before use and keep them handy for future reference.

产品介绍

产品特点:

- ❖ 分体式结构: 煲体与炉底分体结构, 使用及清洗更方便。
- ❖ 智能化控制: 人性化智能化设计, 感应式开关控制, 实现不同功能操作灵活方便。
- ❖ 超耐高温陶瓷煲胆或不锈钢煲胆: 采用优质不锈钢复合底作煲胆, 天然卫生, 环保、安全耐用。
- ❖ 多重安全保护: 设有防干烧, 防超温双重安全保障程序, 使用安全更放心。
- ❖ 多功能设计: 具有炖、蒸、炊、煲汤、煲粥、慢炖等多功能, 实现一煲多用。
- ❖ 感应开关设计: 带灯图标显示, 只要轻轻触摸, 就能实现所需功能设置, 并配有动听美妙声音。
- ❖ 大容量炖盅设计: 配备大容量陶瓷炖盅, 本产品特别适合饮食店和家庭之用。

部分配件名称




使用方法:




使用前准备:

将洗净的所需材料放入内胆, 加入适量水。[注意: 煲汤、煲粥、炊功能情况下, 加水量不能超过最上面的一条最高水位线 (MAX), 炖功能下的加水量不能超过最下面的一条最高水位线 (MAX), 蒸功能下的加水量为最下面一条最高水位线 (MAX) 的一半 (约4碗水), 用干抹布擦干煲胆外表面水渍, 然后将煲胆平稳的放入煲体内; 并轻微左右旋转约90度, 以确保煲底与发热体接触良好。

开机: 接通电源, 此时本机发出“B”的一声, LED屏显示“---”, “开关/保温”图标显示为红色, 表示本机已接通电源。长按“开关/保温”1秒, 功能指示灯显示为红色, 数码管显示“-OFF”, 表示本机已进入待机状态。

关机: 在待机状态下或工作状态下, 长按“开关/保温”1秒, 功能指示灯熄灭, 显示屏显示“---”。

 **煲汤:** (默认工作时间为2.5小时)

1. 触摸“汤功能  ”红色图标, 此时红色图标灯转为绿色, 数码管闪烁, 五秒钟后停止闪烁, 显示“-2:30”, 表示煲汤程序开始, 默认工作时间为2.5小时, 且数字随时间递减, 显示的数值为完成剩余所需时间。
2. 若需调整默认工作时间 (2.5小时), 则可再按“定时图标  ”至所需时间。
3. 当数码屏停止闪烁时, 表示已进入工作程序, 此时若要改用其它功能请先长按“开关/保温图标  ”关机, 重新开机进入待机状态, 才能再次选择相应功能键。

- ① Do not use the appliance if the cable or plug are damaged, please take it to a qualify repair center or our service center.
- ② Please check the power socket is compliance with the rating label.
- ③ Please pull the plug out if the appliance is not use.

Cleaning

- ❖ Before cleaning please take the plug out of the power socket and unplug the cord.
- ❖ Ceramic stew pot, ceramic inner pot and glass lid are fragile, stainless steel inner pot, clean everything carefully. Use neutral detergents to clean if necessary.
- ❖ Never immerse the motor base into water, wipe the motor base with a slightly moist, soft cloth and then dry the base.

Notice:

- ❖ Do not use the appliance if you found there is anything damaged.
- ❖ Please the cleaned base on the flat surface, wipe the stain of housing. Make sure there is nothing on the base and heating element. Put the inner pot into housing properly, meanwhile slightly rotate it to ensure it is well-contacted with the base and heating element.
- ❖ Ceramic stew pot and ceramic inner pot are fragile, be careful during operation to avoid any damage.
- ❖ Lid made from ceramic or glass are fragile, be careful during operation to avoid any damage.
- ❖ When the inner pot is filling with water or ingredients, the overall weight should be heavy. Please cool down the inner pot before removing it and pot housing.

Note:



If you hear “Peng...peng” during operation, it might be the stain or moisture inside pot cause the vapors from heating. It will disappear in a few minutes.

WARNING:



 


- ❖ Beware of the hot surface while the appliance is in operation or just finished, do not touch it directly.
- ❖ People with limited physical, sensorial or mental capabilities or uninformed or inexperienced persons (including children) are not permitted to use this appliance, except when supervised by a person responsible for their safety or are instructed by this person, exactly how to use the appliance.

Code	Problem	Solution
E1	Object on base and heating element	Power off, clear the object after heating element cool down.
	Inner pot misplaced and not connect heating element	Power off, check the pot is securely into position after heating element cool down



 

 
使用方法

3. 煲汤完成后,蜂鸣器会鸣叫提示,同时“煲汤图标”由绿色变为红色,数码管显示“b000”,“保温图标”由红色变为绿色,进入保温程序。表示汤已煲好,随时可以食用。



 

炖: (默认工作时间为4小时)

1. 将食材和适量水放入陶瓷炖盅内并盖好陶瓷炖盖,并在煲锅内放入适量的水,用炖盅架将陶瓷炖盅放入煲锅。
2. 触摸“炖功能”红色图标,此时红色图标灯转为绿色,数码管闪动,五秒钟后,数码管停止闪动,显示“-4:00”,表示炖程序开始,默认工作时间为4小时,且数字部分以分钟为单位递减,显示的当时数值为程序完成所需时间,直至程序完成。
3. 若需调整默认工作时间(4小时),则可再触摸“定时图标”至所需时间。
4. 当数码屏停止闪动时,表示已进入工作程序,此时若要改用其它功能请先长按“开关/保温图标”关机,重新开机进入待机状态,才能再次选择相应功能键。
5. “炖”完成后,蜂鸣器会鸣叫提示,同时“炖图标”由绿色变为红色,数码管显示“b000”,“保温图标”由红色变为绿色,表示已“炖”好,并进入保温程序,随时可以食用。

慢炖: (默认工作时间为6小时)



 

1. 将食材和适量水放入陶瓷炖盅内并盖好陶瓷炖盖,并在煲锅内放入适量的水,用炖盅架将陶瓷炖盅放入煲锅。
2. 触摸“炖功能”红色图标,此时红色图标灯转为绿色,数码管闪动,五秒钟后,数码管停止闪动,显示“-6:00”,表示慢炖程序开始,默认工作时间为6小时,且数字部分以分钟为单位递减,显示的当时数值为程序完成所需时间,直至程序完成。
3. 若需调整默认工作时间(6小时),则可再触摸“定时图标”至所需时间。
4. 当数码屏停止闪动时,表示已进入工作程序,此时若要改用其它功能请先长按“开关/保温图标”关机,重新开机进入待机状态,才能再次选择相应功能键。
5. “慢炖”完成后,蜂鸣器会鸣叫提示,同时“慢炖图标”由绿色变为红色,数码管显示“b000”,“保温图标”由红色变为绿色,表示已“慢炖”好,并进入保温程序,随时可以食用。

炆: (默认工作时间为2小时)

1. 触摸“炆功能”红色图标,此时红色图标灯转为绿色,数码管闪动,五秒钟后,数码管停止闪动,显示“-2:00”,表示“炆”程序开始,默认工作时间为2小时,且数字随时间递减,显示的数值为完成剩余所需时间。
2. 若需调整默认工作时间(2小时),则可再触摸“定时图标”至所需时间。
3. 当数码屏停止闪动时,表示已进入工作程序,此时若要改用其它功能请先长按“开关/保温图标”关机,重新开机进入待机状态,才能再次选择相应功能键。
4. “炆”完成后,蜂鸣器会鸣叫提示,同时“炆图标”由绿色变为红色,数码管显示“b000”,保温灯由红色变为绿色,进入保温程序。表示食物已煮好,随时可以食用。

(温馨提示:“炆”时要经常搅拌并注意水份,以免“炆”干和糊底。)

煲粥: (煲粥默认时间为2小时)

1. 触摸“煲粥功能”红色图标,此时红色图标灯转为绿色,数码管闪动,五秒钟后,数码管停止闪动,数码管显示“-2:00”,表示“煲粥”程序开始,默认工作时间为2小时,且数字随时间递减,显示的数值为完成剩余所需时间。
2. 若需调整默认工作时间(2小时),则可再按“定时图标”至所需时间。
3. 当数码屏停止闪动时,表示已进入工作程序,此时若要改用其它功能请先长按“开关/保温图标”关机,重新开机进入待机状态,才能再次选择相应功能键。
4. “煲粥”完成后,蜂鸣器会鸣叫提示,同时“煲粥图标”由绿色变为红色,数码管显示“b000”,保温灯由红色变为绿色,进入保温程序。表示食物已煮好,随时可以食用。

1. Steam program is finished and serve.

Timer

Please select the function and confirm the screen is still flashing before pressing “TIMER” button, “SOUP”, “PORRIDGE” AND “BRAISE”, add 30 minutes per time, set a timer from 30 minutes to 4 hours.

“STEW” add 30 minutes per time, from 30 minutes to 8 hours.

“STEAM” add 5 minutes per time, from 20 minutes to 1 hour.

PRE-SET

Before selecting the “PRE-SET” program, please place ingredients and water into inner pot. Select the function and confirm the screen is still flashing, then press “PRE-SET” button.

Add 1 hour per time by pressing “PRE-SET” button, the pre-set time will be display in the first position and flash, set the PRE-SET time from 1 hour to 9 hours.



一般禁止
Ordinary Prohibition



拆分禁止
Disassemble Prohibition



湿手触摸禁止
Wet Hand Prohibition



湿水禁止
Wet Water Prohibition



触摸禁止
Contact Prohibition



强制禁止
Compulsory Prohibition

SAFETY PRECAUTIONS:



Always keep the appliance and power cord out of the reach of children.



To prevent electric shock, do not touch the socket or power cord with moist hand.



Please place the appliance on dry surface, never use the appliance on wet surface. Do not place the pot housing into water.



Never carry the appliance by the power cable and do not place it on the power cable.



To prevent overheating, please do not cover anything on the appliance.



Please place the appliance on horizontal surface, do not place it on the leaning surface more than 5 degree.



This appliance is only for domestic use and is not suitable for commercial use.



Never attempt disassemble and refit the appliance to avoid danger. Warranty will become invalid if you disassemble it yourself.



Keep the appliance away from hot oven, never place the appliance near heat flames.

使用方法



蒸：（默认工作时间为20分钟）

1. 在煲胆内放入加入适量水,然后将要蒸的食材放在蒸笼内,再把一层或多层蒸笼放在锅胆上,再放上不锈钢盖。
2. 触摸“蒸功能 ”红色图标,此时红色图标灯转为绿色,数码管闪动,五秒钟后,数码管停止闪动,数码管显示“-20”,表示“蒸”程序开始,默认工作时间为20分钟,且数字随时间递减,显示的数值为完成剩余所需时间。
3. 若需调整默认工作时间(20分钟),则可再按“定时图标 ”至所需时间。
4. 当数码屏停止闪动时,表示已进入工作程序,此时若要改用其它功能请先长按“开关/保温图标 ”关机,重新开机进入待机状态,才能再次选择相应功能键。
5. “蒸”完成后,蜂鸣器会鸣叫提示,同时“蒸图标 ”由绿色变为红色,数码管显示“b000”,保温灯由红色变为绿色,进入保温程序。表示食物已煮好,随时可以食用。



定时：

在先设置所需功能后,且数码屏仍在闪动时,再触摸“定时功能 ”红色图标,则：“煲汤 ”、“煲粥 ”、“炖 ”每按一次“定时图标 ”,相应增加0.5小时,最多4小时,最少0.5小时。

“炖 ”每按一次“定时 ”相应增加0.5小时,最多8小时,最少0.5小时。

“蒸 ”每按一次“定时 ”增加5分钟,最多1小时,最少20分钟。



预约：

若需使用“预约 ”功能（即先放好食材和水后,待后才开始工作）,请先设置所需功能后,且在数码屏仍在闪动时,再按“预约 ”红色图标。每按一次预约键增加1小时,第一个数码显示1,最多9小时,最少1小时。

产品安全注意事项



一般禁止

Ordinary Prohibition



拆分禁止

Disassemble Prohibition



湿手触摸禁止

Wet Hand Prohibition



湿水禁止

Wet Water Prohibition



触摸禁止

Contact Prohibition



强制禁止

Compulsory Prohibition

• 请勿让儿童使用本产品
和放置在儿童不能接触
的地方使用。



• 请勿用湿手直接接触
电源插座或电源线,
以免发生触电危险。



• 请将此产品存放在通
风干燥处,不可置于
潮湿处使用,产品煲
身不可浸放水中清洗。



1. Press the button again will start the second cycle.
2. After the "SLOW STEW" finished, "SLOW STEW" green icon will turn to red along with alarm tone, screen display "b000", "KEEP WARM" icon will turn to green from red and keep warming. Slow Stew program is finished and serve.

BRAISE: (Duration 2 hours)

1. Press "BRAISE" button, red icon turn green, digital screen flash and stop in 5 seconds, when display "-2:00", meaning the "BRAISE" program will start with the timer for 2 hours, the screen will count down until it finishes.
2. You can set the desired time by pressing "TIMER" button.
3. When digital screen stop flashing, meaning the program start to process if you wish to select other functions please turn off the cooker by pressing "KEEP WARM/OFF" button. Press the button again will start the second cycle.
4. After the "BRAISE" finished, "BRAISE" green icon will turn to red along with alarm tone, screen display "b000", "KEEP WARM" icon will turn to green from red and keep warming. Braise program is finished and serve.

(Note: please mind the water volume to avoid braise dryly and scorching.)

PORRIDGE: (Duration 2 hours)

1. Press "PORRIDGE" button, red icon turn green, digital screen flash and stop in 5 seconds, when display "-2:00", meaning the "PORRIDGE" program will start with the timer for 2 hours, the screen will count down until it finishes.
2. You can set the desired time by pressing "TIMER" button.
3. When digital screen stop flashing, meaning the program start to process if you wish to select other functions please turn off the cooker by pressing "KEEP WARM/OFF" button. Press the button again will start the second cycle.
4. After the "PORRIDGE" finished, "PORRIDGE" green icon will turn to red along with alarm tone, screen display "b000", "KEEP WARM" icon will turn to green from red and keep warming. Porridge program is finished and serve.

STEAM: (Duration 20 minutes)

1. Add approximate water into inner pot, then put ingredient in steamer, place one layer or multi-layer steamer into pot, cover with stainless steel lid.
2. Press "STEAM" button, red icon turn green, digital screen flash and stop in 5 seconds, when display "--:20", meaning the "STEAM" program will start with the timer for 20 minutes, the screen will count down until it finishes.
3. You can set the desired time by pressing "TIMER" button.
4. When digital screen stop flashing, meaning the program start to process if you wish to select other functions please turn off the cooker by pressing "KEEP WARM/OFF" button. Press the button again will start the second cycle.

After the "STEAM" finished, "STEAM" green icon will turn to red along with alarm tone, screen display "b000", "KEEP WARM" icon will turn to green from red and keep warming.

• 不可用力拉扯电源线或使用电源提携、移动产品，以免损坏产品。



• 本产品在工作时，切勿以任何物品覆盖机身，以免产品过热产生危险。



• 请将本产品放置在水平的台面上使用，不可放置于倾斜角大于5度的平面上使用。



• 本产品限于家庭范围内使用，不可用于商业用途。



• 请勿自行拆卸或改装机内任何零件，以免产生危险。如若自行拆卸后，保修期将作废。



• 此产品不要置于火炉上燃烧，不宜置于易燃易爆物品附近使用。



• 如产品电源线损坏，必须立即停止使用，并送与有资质的维修部或本公司售后维修部维修后方可使用。



• 请使用与本机铭牌标识相符并带有良好接地的电源插座。(220V~/50Hz)



• 如果长期不使用本产品，请将其电源插头从电源插头上拔下。



使用前的清洁步骤：

- ❖ 清洁前请确认本产品没有接通电源。
- ❖ 陶瓷炖盅、陶瓷内胆，玻璃盖为易碎品，不锈钢胆，清洁时请轻拿轻放；此配件可浸入水中清洗，如有需要，可使用中性清洁剂清洗。
- ❖ 底座主机为机电部分，切勿浸入水中清洗。必要时可使用湿抹布擦拭干净，并晾干再使用。

使用注意事项：

- ❖ 开始使用时请确保产品没有任何损坏，否则请立即停止使用。
- ❖ 将干净的底座放在平整的台面，擦干壶体外表水渍，仔细检查壶底与发热板，确保其表面无异物后，将汤煲平放在底座上并左右转动几下，以保证壶底与发热板充分接触。
- ❖ 陶瓷煲胆和炖盅均为陶瓷体，属易碎品，使用过程请拿轻放，以防损坏。
- ❖ 煲盖为陶瓷体或玻璃制品，属易碎品，使用过程请拿轻放，以防损坏。
- ❖ 当煲体内的煲胆装有水或物料时，整体重量较重，为确保安全，请在煲体处于冷（温）态下，先小心地拿开煲胆后再搬移煲体。

温馨提示

本产品在使用时，如发出“呼…呼…”声，是因为水渍没有擦干，或煲体在水中浸泡时间过长，煲体内所含水份在加热时产生蒸汽所致，几分钟后会自动消失，请放心使用。

型号	额定输入电压/频率	额定功率	容量	备注
MPS-13	240V/50Hz	800W	7L	不锈钢内胆、四位数码显示

“KEEP WARM/OFF” button, digital screen shows “OFF”, function light will flash red indicates that the cooker is ready for use.

Power off: under standby and working mode, press “KEEP WARM/OFF” button, function light will turn off, and then display “---”.

SOUP: (Duration 2.5 hours)

1. Press “SOUP” button, red icon turn green, digital screen flash and stop in 5 seconds, when display “-2:30”, meaning the soup program will start with the timer for 2.5 hours, the screen will count down until it finishes.
2. You can set the desired time by pressing “TIMER” button.
3. When digital screen stop flashing, meaning the program start to process, if you wish to select other functions please turn off the cooker by pressing “KEEP WARM/OFF” button. Press the button again will start the second cycle.
4. After the soup finished, “SOUP” green icon will turn to red along with alarm tone, screen display “b000”, “KEEP WARM” icon will turn to green from red and keep warming. Soup is finished and serve.

STEW: (Duration 4 hours)

1. Put all ingredient into ceramic pot and add water. Ensure that the ceramic lid is properly secured, add approximate water into boiled pot, place the inner pot in it with the support.
2. Press “STEW” button, red icon turn green, digital screen flash and stop in 5 seconds, when display “-4:00”, meaning the stew program will start with the timer for 4 hours, the screen will count down until it finishes.
3. You can set the desired time by pressing “TIMER” button.
4. When digital screen stop flashing, meaning the program start to process if you wish to select other functions please turn off the cooker by pressing “KEEP WARM/OFF” button. Press the button again will start the second cycle.
5. After the “STEW” finished, “STEW” green icon will turn to red along with alarm tone, screen display “b000”, “KEEP WARM” icon will turn to green from red and keep warming. Stew program is finished and serve.

SLOW STEW: (Duration 6 hours)

1. Put all ingredient into ceramic pot and add water. Ensure that the ceramic lid is properly secured, add approximate water into outer pot, place the inner pot in it with the support.
2. Press “SLOW STEW” button, red icon turn green, digital screen flash and stop in 5 seconds, when display “-6:00”, meaning the “SLOW STEW” program will start with the timer for 6 hours, the screen will count down until it finishes.
3. You can set the desired time by pressing “TIMER” button. When digital screen stop flashing, meaning the program start to process if you wish to select other functions please turn off the cooker by pressing “KEEP WARM/OFF” button.

警告:

- ❖ 本产品在工作或刚工作完成时，产品表面温度较高，请不要手直接接触本产品，以防烫伤。
- ❖ 体能不足者（包括儿童）、精神不健全者和没有经验和相关知识的人士必须在其监护人的指导下使用。

故障代码

代码	故障原因	处理方法
E1	煲胆底或发热板表面有异物	断电等发热盘冷却下来清除异物
	煲胆没放好与发热盘接触不良	断电等发热盘冷却下来再放平壶体使用
	测温头短路或电路板故障	送维修部维修
E2	测温头开路或电路板故障	送特约维修部

误操作处理:

当你操作过程操作错误或产品已进入工作后需改变使用功能时,可按“关/保温”键,让本机关机后重新开始设定即可。

操作一览表

功能	按键次数	显示	备注
开机	长按开关/保温键1秒	-OFF	进入待机状态
关机	长按开关/保温键1秒	----	进入关机状态
汤	待机状态按汤键一次	2.5定时煲2.5小时, 时间递减	可定时, 可预约
炖	待机状态按炖键一次	4.0定时炖4小时, 时间递减	可定时, 可预约
慢炖	待机状态按炖键一次	6.0定时炖6小时, 时间递减	可定时, 可预约
粥	待机状态按粥键一次	2.0定时煲粥2.0小时, 时间递减	可定时, 可预约
蒸	待机状态按蒸键一次	0.20定时蒸20分钟, 最长可设置1小时, 时间递减	可定时, 可预约
炆	待机状态按炆键一次	2.0定时炆2.0小时, 时间递减	可定时, 可预约
保温	待机状态按开关/保温键一次	b000	

生活小贴士

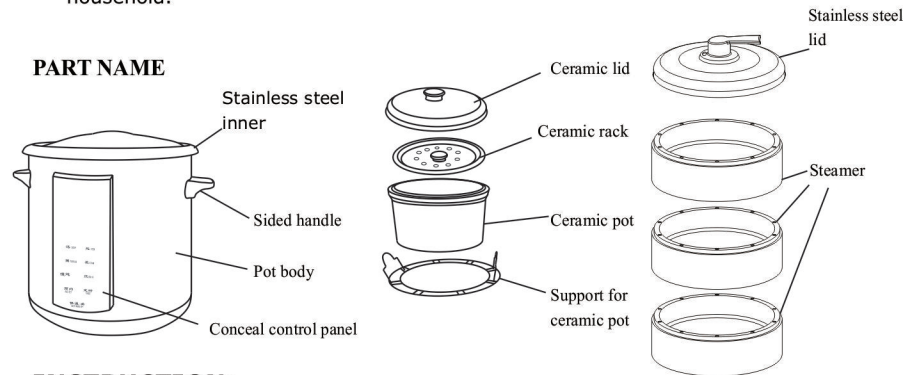
粥煲好后若想生滚肉粥（加生的肉类、鱼类）可以按蒸键大火煮熟肉类，煮过程注意看管以免溢出，煮的过程须搅拌以免糊底。

Introduction

FEATURES:

- ❖ Separated structure: pot housing with removable base, convenient in using and cleaning.
- ❖ intelligent control: humanized intelligent design, induction switch control to achieve a different operation, flexible and convenient.
- ❖ Super heating-resistant ceramic inner pot or stainless steel inner pot: inner pot adopt high-quality stainless steel composite, natural, healthy, environmentally, safety and durable.
- ❖ Multi-safety protection: equip with an overheating protection and anti-scorching double protection.
- ❖ Multi-function design: great for stew, steam, braise, soup, porridge, slow stew and other functions.
- ❖ Induction switch design: with lighted icon, easy to operate and along with beautiful voice.
- ❖ Large volume pot design: equip with a large ceramic pot, this appliance is suitable for household.

PART NAME



INSTRUCTION:

Preparation:

Put all ingredient into inner pot and add water. (Note: never exceed the upper max water marking for soup, porridge and braise, the bottom max water marking for stew function and half volume of bottom max water marking for steam function (approx 1000ml). Wipe the outer side of the inner pot and then put it into housing properly, meanwhile slightly rotate it to ensure it is well-contacted with the base and heating element.

Power on: after connecting the power, digital screen display “---” with “B” warning tone, “KEEP WARM/OFF” icon will flash red, means the cooker has connected electricity. Press